



**DIALER PROGRAMMING (\*40-\*49)**

For fields \*40-\*42, enter digits 0-9, or # + 11 for [\*], # + 12 for [#], # + 13 for 2 second pause. If fewer than the maximum number of digits is entered, exit the field by pressing [\*] followed by the next field number to be programmed.

\* 4 0 PABX ACCESS CODE

Enter 4 digits. To clear entries from field, press \*40\*.

\* 4 1 PRIMARY PHONE No.

Enter up to 12 digits. Do not fill unused spaces.

To clear entries from field, press \*41\*.

\* 4 2 SECONDARY PHONE No.

Enter up to 12 digits. Do not fill unused spaces.

To clear entries from field, press \*42\*.

\* 4 3 SUBSCRIBER ACCOUNT No.

Enter 0-9; #+11 for B; #+12 for C; #+13 for D; #+14 for E; [#+15 for F]. Enter \* as 4th digit, if 3+1 dialer reporting is to be used. If only 3 digits used, exit by pressing \* (and press 44, if entering next field). To clear entries from field, press \*43\*.

Examples: For Acct No. 1234, enter:

1  2  3  4

For Acct No. B234, enter:

#+11  2  3  4

For Acct No. 123, enter:

1  2  3  \*

\* 4 4 REPORT FORMAT

[0]

0 = 3+1, 4+1 ADEMCO L/S STANDARD  
 1 = 3+1, 4+1 RADIONICS STANDARD  
 2 = 4+2 ADEMCO L/S STANDARD  
 3 = 4+2 RADIONICS STANDARD

6 or undefined = 4+2 ADEMCO EXPRESS  
 7 = ADEMCO CONTACT ID REPORTING  
 8 = 3+1, 4+1 ADEMCO L/S EXPANDED  
 9 = 3+1, 4+1 RADIONICS EXPANDED

\* 4 5 PHONE SYSTEM SELECT

†  [0]

If Cent. Sta. IS NOT on a WATS line: 0 = Pulse Dial; 1 = Tone Dial  
 If Cent. Sta. IS on a WATS line: 2 = Pulse Dial; 3 = Tone Dial

\* 4 6 SESCOA/RADIONICS SELECT

†  [0]

0 = Radionics (0-9, B-F reporting); 1 = SESCOA (0-9 only reporting)  
 Select 0 for all other formats.

\* 4 7 15 SEC DIALER DELAY (BURG)

†  [0]

0 = no, 1 = yes

\* 4 8 PERIODIC TEST MESSAGE

†  [0]

0 = none, 1 = 24 hrs; 2 = weekly (enter Test Code in field \*64)  
 (Initial report is sent 12 hrs. after exiting programming or downloading.)

\* 4 9 SPLIT/DUAL REPORTING

[0]

**TO PRIMARY PHONE No.**

0 = All  
 1 = Alarms, Restore, Cancel  
 2 = All Reports except Open/Close, Test  
 3 = Alarms, Restore, Cancel  
 4 = All Reports except Open, Close, Test  
 5 = All Reports (Dual Reporting)

**TO SECONDARY PHONE No.**

Backup Report Only  
 Other Reports  
 Open/Close, Test  
 All Reports  
 All Reports  
 All Reports

**TO PRIMARY PHONE No.**

6 = All reports except open/close  
 7 = All reports  
 8 = All reports

**TO PAGER No. †† (secondary)**

Alarms, Open/Close, Trouble  
 Alarms, Troubles  
 Alarms, Open/Close, Troubles

† Entry of a number other than one specified will give unpredictable results.

†† Can only be used if primary reporting format is Ademco Contact ID.

## ALARM REPORT CODES (\*50-\*59)

\*50 1st DIGIT OF Zn 95, Zn 96 (Keypad Panics)   (95) (96)

Enter 1-9, 0, B-F as described in box below.  
An entry of "0" will disable report.

2nd Digit of each (for expanded or 4+2 reporting) is same as for field \*57.

Zone 95 is Console Silent Panic (Key A or 1 & \*).

Zone 96 is Console Audible Panic (Key C or 3 & #).

\*51 ZONE 1 ALARM REPORT CODE

\*52 ZONE 2 ALARM REPORT CODE

\*53 ZONE 3 ALARM REPORT CODE

\*54 ZONE 4 ALARM REPORT CODE

\*55 ZONE 5 ALARM REPORT CODE

\*56 ZONE 6 ALARM REPORT CODE

\*57 ZONE 7 ALARM REPORT CODE (Console Panic: Key B or \*&#)

\*58 ZONE 8 ALARM RPT CODE (Duress)

\*59 ZONE 9 ALARM RPT CODE (RF supervision)

## SYSTEM STATUS REPORT CODES (\*60-\*68)

\*60 TROUBLE REPORT CODE

\*61 BYPASS REPORT CODE

\*62 AC LOSS REPORT CODE

\*63 LOW BAT REPORT CODE

\*64 TEST REPORT CODE

\*65 OPEN REPORT CODE  ††

\*66 CLOSE REPORT CODE  ††

†† 2nd digit is automatically sent as the user number if expanded or 4+2 reporting is selected.

\*67 RF XMTR LOW BAT REPORT CODE

\*68 CANCEL REPORT CODE

## RESTORE REPORT CODES (\*69-\*75)

\*69 GROUP RESTORES for TROUBLE, RF LOW BATTERY, BYPASS  [0]  
0 = no (report for each restore),  
1 = yes (report after all zones restored)  
**Note:** "1" not applicable to Contact ID reporting.

\*70 ALARM RESTORE REPORT CODE   
2nd digit is automatically sent as the 2nd digit of the zone alarm report code programmed in \*50-\*59 and \*76-\*83, if expanded or 4+2 reporting is selected.

\*71 TROUBLE RESTORE REPORT CODE

\*72 BYPASS RESTORE REPORT CODE

\*73 AC RESTORE REPORT CODE

\*74 LOW BAT RESTORE REPORT CODE

\*75 RF XMTR LO BAT RSTR RPT CODE

## TO PROGRAM REPORT CODES FOR ALARM, SYSTEM STATUS, RESTORE, & WIRELESS ZONES (\*51-\*83)

### For 3+1 or 4+1 Standard Format:

Enter a code in the *first* box: 1-9, 0, B, C, D, E, or F.  
Enter "#+10" for 0, "#+11" for B, "#+12" for C, "#+13" for D, "#+14" for E, "#+15" for F.

### For Expanded or 4+2 Format:

Enter codes in *both* boxes (1st and 2nd digits) for 1-9, 0, or B-F, as described above.

### For Ademco Contact ID Format:

Enter any digit (other than "0") in the *first* box, to enable zone to report. This is an "enabling" code only and is not the actual report sent to the central office. Entries in the *second* box will be ignored.



An entry of "0" in the *first* box for any report format will **disable** a report. An entry of "0" in the *second* box will result in automatic advance to the next field when programming. **To send "0" as a digit, you must enter # + 10.**

### Examples:

For Code 3 (Single Digit), enter:  3  0

For Code 32 (Two Digits), enter:  3  2

For Code B2 (Hexadecimal) enter:  #11  2

